

Camera Support Strap Instructions

Attaching the Camera Support Strap



1. Locate the straps with the snap clips labeled "CAMERA SUPPORT STRAP."



2. Put the Slik Clip through the upper loop of the shoulder strap.



3. Use the technique shown to close the Slik Clip securely.



4. To disconnect the Slik Clip, position your fingers as shown.

Attaching ONE Camera



1. Put the camera strap around your neck.




2. Use the round metal rings to attach either side to the shoulder straps.



3. Adjust the camera up or down.

Attaching TWO Cameras

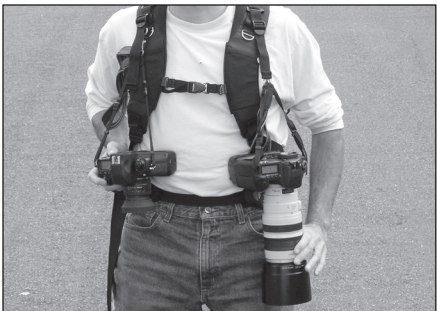

Use the same method but attach the round rings from the same camera strap to the same side of the backpack. Additional Camera Straps can be purchased for this purpose.

Positioning a Long Lens Vertically



The camera strap can be used to provide support underneath the camera body and to rest the camera pointed downward.