


thinkTANK™ photo

Be Ready "Before The Moment"

Bazooka Tripod Case Instructions

This tripod case is designed as a protective carrying case for tripods, light stands, and monopods. It can be worn over the shoulder, or used with Think Tank Photo backpacks.

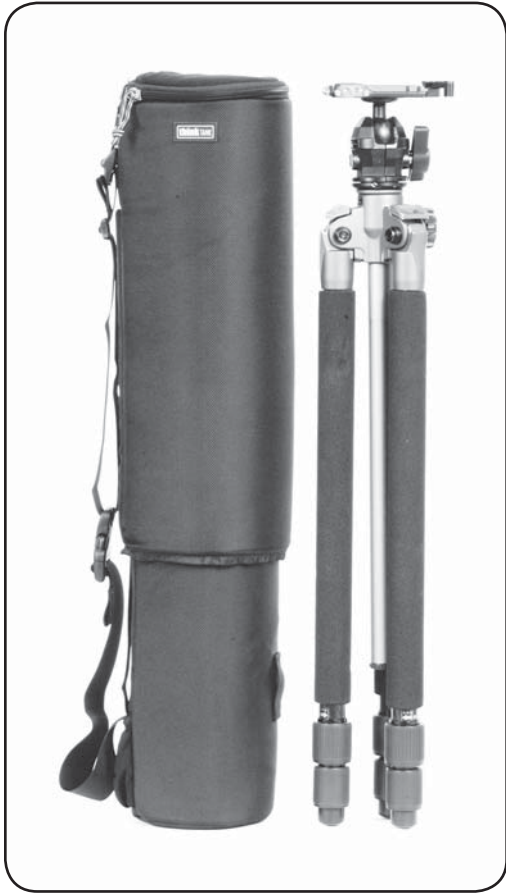

This tripod bag can hold a tripod with the Tripod Head Attached. Adjusts from 15 – 30" (40 – 79 cm) long, and up to 5" (13 cm) in diameter.


Using the webbing strap, it can be carried as a shoulder bag.



To extend or retract the Bazooka Tripod Case, lift up on adjustment buckle while pulling up or down on the lower portion of the Bazooka Tripod Case.



Top of Bazooka

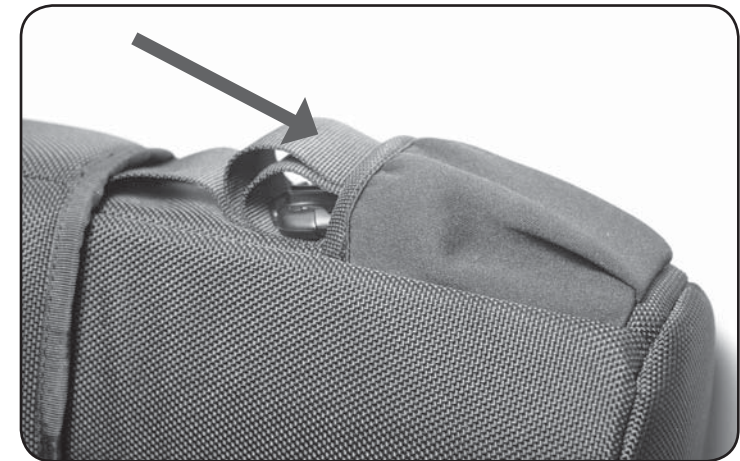

Lower Side of Bazooka

If you are not using it as a shoulder bag, unclip the buckle and stuff the ends into the stretchable pockets for storage.

Bazooka Tripod Case Instructions – Attaching the Bazooka Tripod Case to a Backpack



Locate the piece of webbing with the female buckle included with instructions inside of your backpack.

Attach it to the triglide that is on the backpack.



Disconnect the buckle on the shoulder strap of the Bazooka, and connect the male portion to the female portion that is attached to the bag.



Secure the tripod case in position with the upper tripod strap and the lower compression strap that is included in your backpack.